



### 1-1. LTEModel

- ① Make sure if your iPhone and camera is not connected with WLAN
- ② Launch RICOH THETA App

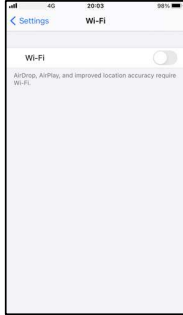


### 1-2. Non-LTEModel(Wi-Fi model)

- ① Connect to the internet on the Settings of iPhone
- ② Launch RICOH THETA App

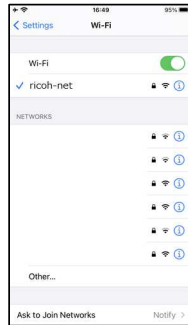


### 2. LTEModel/Non-LTEModel(Wi-Fi model)

- ① Tap "Settings"

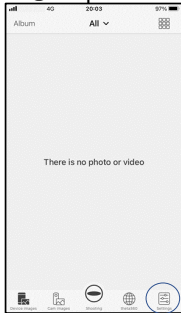

### 3. LTEModel/Non-LTEModel(Wi-Fi model)

- ① Tap "Update firmware"

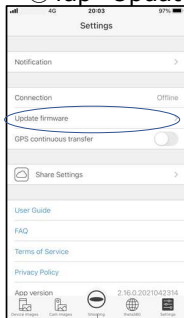


### 4. LTEModel/Non-LTEModel(Wi-Fi model)

- ① Switch the THETA App to background and open the Settings of iPhone to change the WLAN connection




## 5. LTEModel/Non-LTEModel(Wi-Fi model)

① Connect to THETA SC2 on the Settings of iPhone

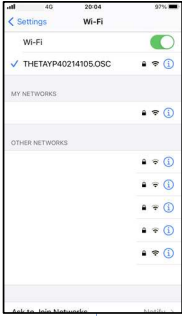

### 6-1. LTEModel/Non-LTEModel(Wi-Fi model)


① Tap "Check the camera version"

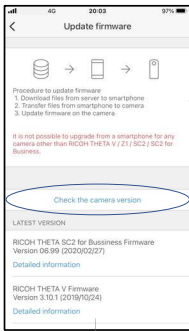

### 6-2. LTEModel/Non-LTEModel(Wi-Fi model) (Network error)

Unable to connect to camera.


Tap "OK" and "Check the camera version" again.

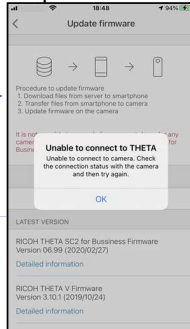

## 7. Non-LTEModel(Wi-Fi model)


① Switch the THETA App to background and open the Settings of iPhone to change the WLAN connection

\* No need for LTE model

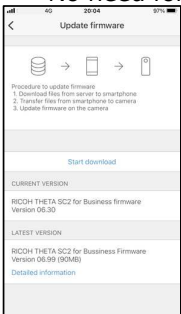


## 8. Non-LTEModel(Wi-Fi model)

① Connect internet on the settings of iPhone

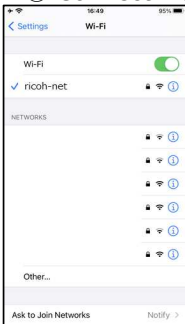

## 9. LTEModel/Non-LTEModel(Wi-Fi model)

① Tap "Start download"

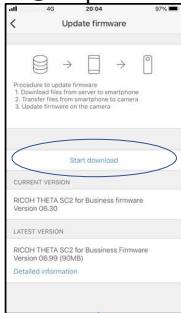


## 10. LTEModel/Non-LTEModel(Wi-Fi model)

① Tap "OK"




## 11. LTEModel/Non-LTEModel(Wi-Fi model)

① Downloading

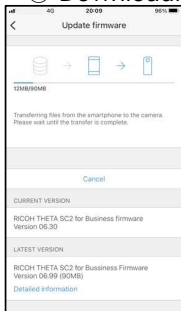


## 12. Non-LTEModel(Wi-Fi model)

① Switch the THETA App to background and open the Settings of iPhone to change the WLAN connection  
\*No need for LTE model.

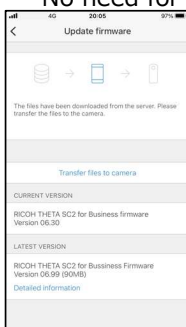

### 13. Non-LTEModel(Wi-Fi model)

① Connect to THETA SC2 on the settings of iPhone

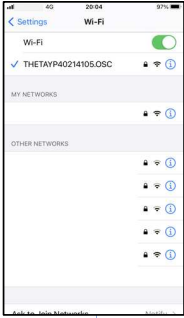


#### 14-1. LTEModel/Non-LTEModel(Wi-Fi model)

① Tap "Transfer files to camera"

\* After tapping, either 15) "Transferring" or 14-2)"Failed to transfer firmware" screen will be shown.


\* Tap "Transfer files to camera" again , if 14-2."Failed to transfer firmware" is shown.

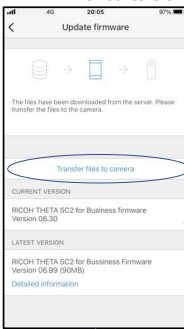

#### 14-2. LTEModel/Non-LTEModel(Wi-Fi model) (Network error)


Unable to transfer firmware files due to the connecting error.

Tap "OK" and "Trasfer files to camera" again.

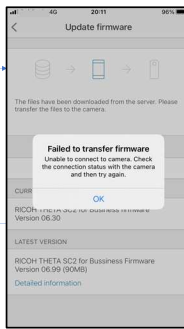

### 15. LTEModel/Non-LTEModel(Wi-Fi model)


① Transferring files

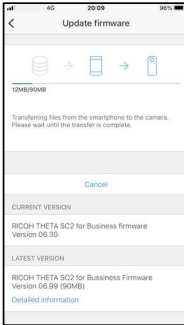

## 16. LTEModel/Non-LTEModel(Wi-Fi model)

- ① Confirm the data transfer is completed on the progress bar

\* Camera is ready for firmware update, after the transfer is complete.

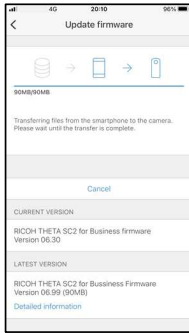

- ① Turn off THETA SC2 and turn it on again. (Firmware update will start automatically after the power is turn on.)

- ② During the Firmware update, THETA SC2 icon will blink alternately with the both still image and video shooting mode icons.

- ③ After the Firmware update is complete, THETA SC2 will be on automatically.

- ④ The Firmware update is complete, if THETA SC2 starts normally.

## 17. LTEModel/Non-LTEModel(Wi-Fi model)

- ① An error may be shown though the transfer is completed

